

# Tire Inflator & Tire Chuck



**DT-6600**  
Digital Tire Inflator  
Plastic body  
w/50cm rubber hose



Proper tire pressure improves maximizes gas mileage.



On / Off light button: push and hold for 3 seconds to turn on the light.  
Unit / reset button; push and hold 3 seconds to reset to zero.



Carefully push away the battery cover. Pay attention to correct battery orientation(±).



**SA-6600A**  
Tire Inflator W/Gauge  
(220psi /15 Bar)



**SA-6605**  
Tire Inflator / Deflator  
(220psi)



**SA-6606 Industrial**  
Professional Tire Inflator Gauge (150psi /10kg)



**SA-6612**  
Professional 3-Function Tire Gauge (200psi /14kg)



**SA-6612-3.5**  
with 3.5" guage (200psi /14kg)



**AC-1001**  
5/16" I.D. Hose Chuck (Brass)



**SA-3363**  
Tire Chuck W/ Steel Pipe



**SA-33640Z**  
Dual Head Tire Chuck (Zinc)



**SA-33682**  
10" Dual Head Tire Chuck W/1/4" Female Fitting (Zinc)



**TC-3**  
Air Tire Chuck W/5/16" (I.D.) PVC Hose (1ft)